




What's In The Box

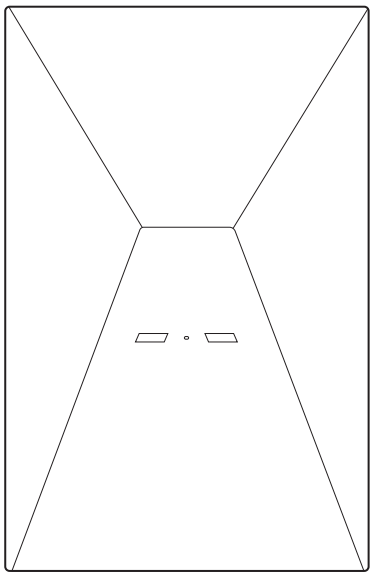


Standard

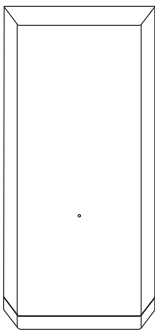


Power Supply

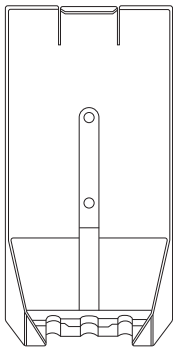


Power Supply Mount

 


Enterprise Cable
50 m
(164 ft)

 


AC Power Cable
1.8 m
(6 ft)

 

Ethernet Cable
5 m
(16.5 ft)

 

Screws
4x

 

Wall Anchors
4x


1 | Download the Starlink App

Scan the QR code to download the Starlink App.



2 | Find A Clear View of Sky and Check for Obstructions


Your Starlink needs a clear view of the sky so it can stay connected with satellites as they move overhead. Objects that obstruct the connection between your Starlink and the satellite, such as a tree branch, pole, or roof, will cause service interruptions. Use the obstruction tool in the App to ensure you have selected a suitable mounting location.

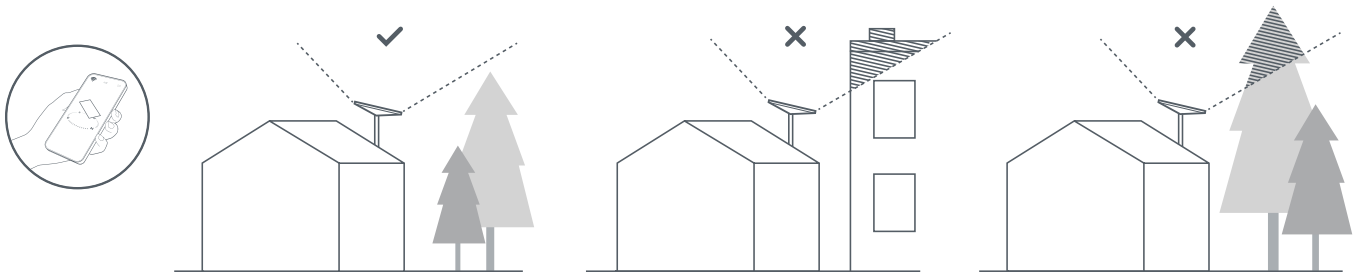


3 | Install Mount

Using your desired Starlink mount, install in an elevated location, like a roof, pole, or wall.


Additional mounts and accessories are available for purchase on the Starlink Shop.

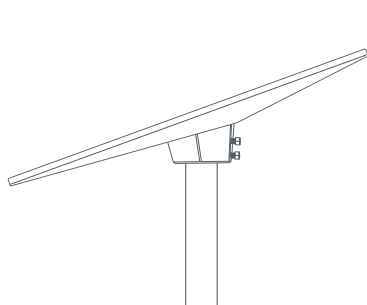

Pipe Adapter

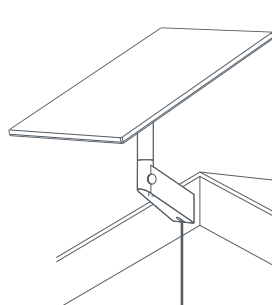


Wall Mount

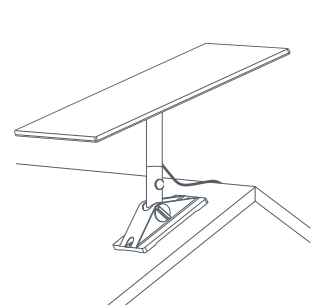

Pivot Mount

4 | Connect and Align Starlink

Follow the cable routing instructions for your chosen Starlink mount and plug one end of the Enterprise Cable into your Starlink. Ensure the plug is fully inserted such that the plug face is flush with the surface. To remove the cable, pull firmly outward as there is no release tab. Plug the other end of the Enterprise Cable to your Power Supply. Connect the Ethernet Cable to the power supply and the other end to a router.

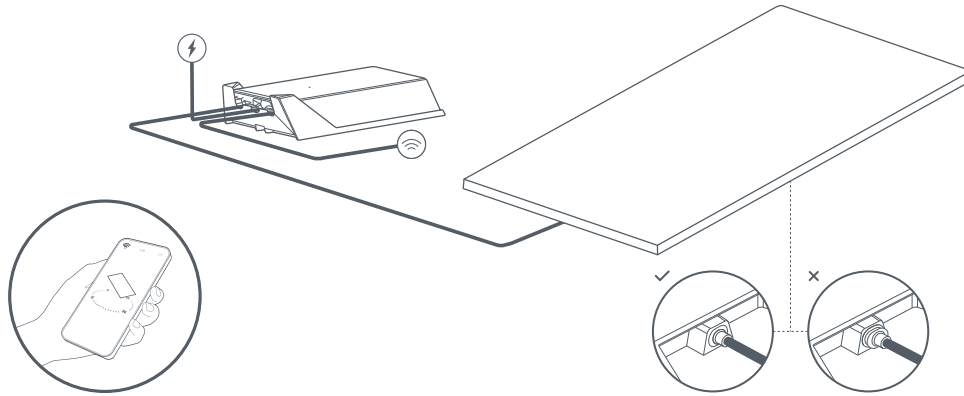

You can utilize the Starlink App to view statistics, access terminal settings and contact support. Configuration may be required for the Starlink app to work with some 3rd party routers.


After you have set up your 3rd party router and connected to Starlink with the WAN port, open the Starlink app. If the app says "Starlink unreachable", create a static route in your router configuration settings. Please refer to your router's documentation for instructions on setting a static route.

Network destination: 192.168.100.0
Subnet Mask: 255.255.255.0
Gateway: 192.168.100.1
Interface: WAN

Note: These options may differ depending on your specific hardware and network configuration.

5 | Connect to WiFi

1. On your device, find and connect to the STARLINK network in your WiFi settings.

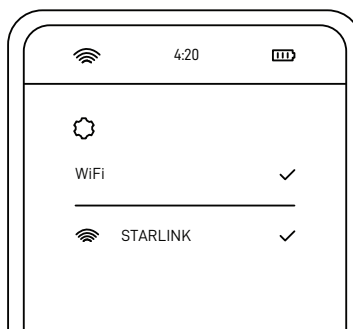


2. Once connected, a browser window will open prompting you to enter a new SSID (Network name) and password. This step is optional but recommended.
3. You are now connected! Open the Starlink App to customize additional settings, check your connection, and more.

1 | Mark Pilot Holes


Remove the power supply from its mount and select a mount location no more than 1.8 m (6ft) away from your power source.

Mark the location of the two holes on your Power Supply Mount using a pen or pencil.

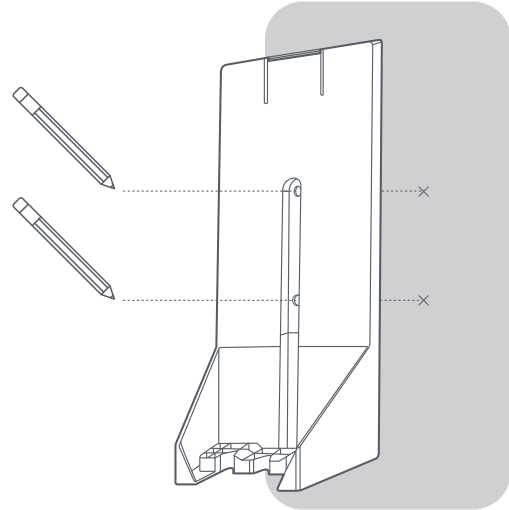

2 | Drill the Pilot Holes


Drill the holes with a an 8 mm (5/16 in) drill bit.

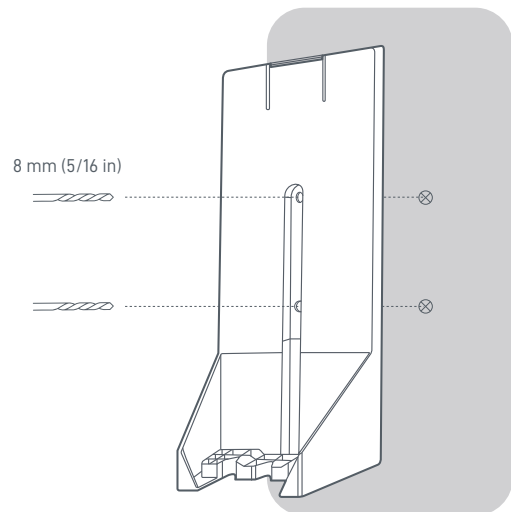

3 | Install Anchors and Mount

Push anchors into holes until flush with the wall.


Place the wall mount over the anchors and screw the mount into the wall until securely attached.

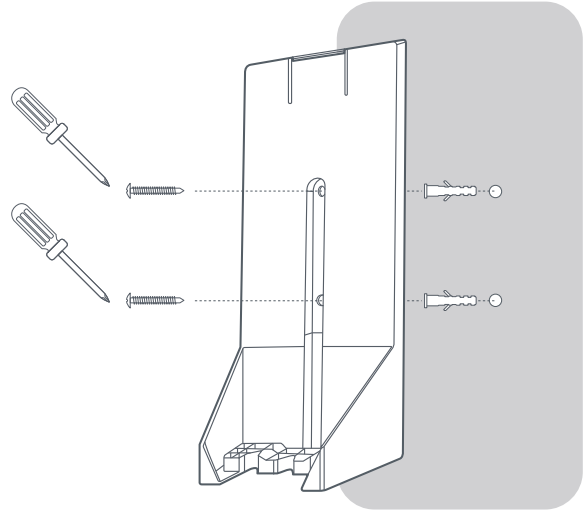

4 | Plug In Cables and Power Supply

Plug the Starlink, AC and Ethernet cables into the power supply. Slide the power supply into the mount, making sure the top clip snaps into place.

Finish installation by routing the Ethernet cable to your router install location, connect to router and plug in router and power supply into your power source.

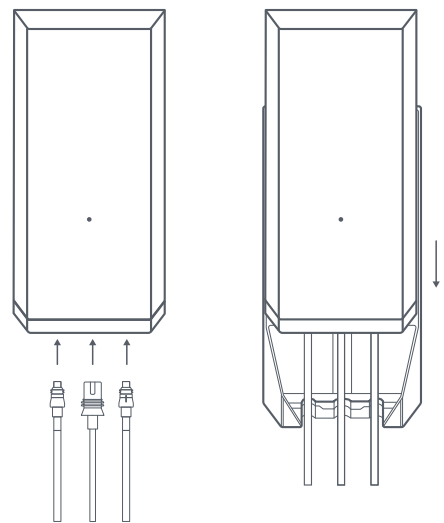

INSTALLATION CONDITIONS

⚠**CAUTION!** If you are uncomfortable with any part of the installation process, do not attempt - contact a professional to install your Starlink. Starlink is not responsible for injury or damage to property caused by the installation process.

Kit Installation for Use on Moving Vehicles.

⚠**CAUTION!** Take extra care if installing a Starlink for being used on a moving vehicle or vessel. Ensure that the mount is installed firmly on a structurally sound, horizontal surface away from other equipment to give your Starlink a clear view of the sky. Equipment falling off the vehicle due to poor installation practices can cause serious accidents resulting in bodily injury, do not mount the Starlink on any vehicle or vessel if the mount structure is not stable, or if it cannot be properly secured as described in this guide. Ensure the installation on vehicle or vessel is compliant with local Department of Transportation or maritime regulations.

⚠**WARNING!** Mounts are not designed for high winds, hurricane or tornado wind loads. Tethering should be used in all cases to prevent failure in an unexpected wind event. See installation instructions before connecting this equipment to the input supply.

⚠**WARNING!** To avoid personal injury and/or damage to the property when drilling, take caution and follow basic safety procedures, including:

- Wear appropriate eye, hand, and face protection.
- Avoid studs, electrical wiring, and water lines when drilling. Drilling into any of these can lead to fire, shock, injury, or death.
- Drill at a slight downward angle from the home interior to the home exterior and thoroughly apply sealant. Improper drilling and sealing may lead to water and/or bug intrusion and/or damage.