STARLINK | PERFORMANCE WALL MOUNT

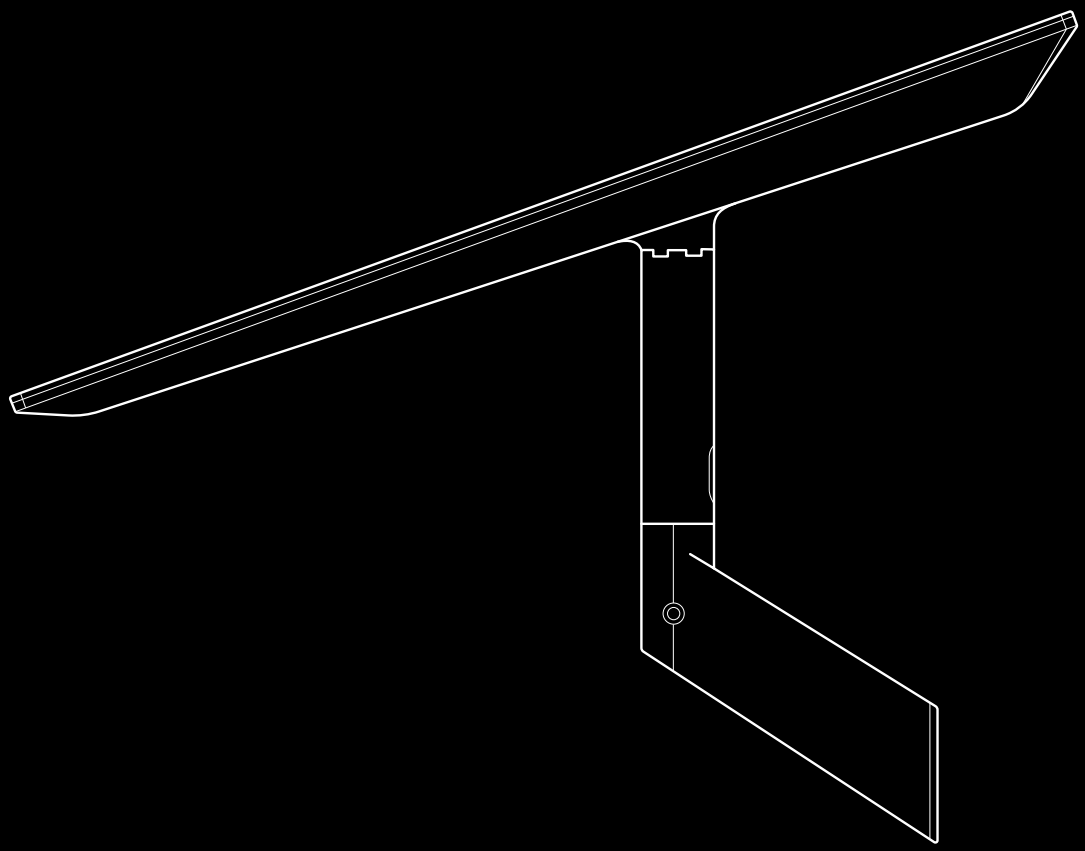

What's in the Box

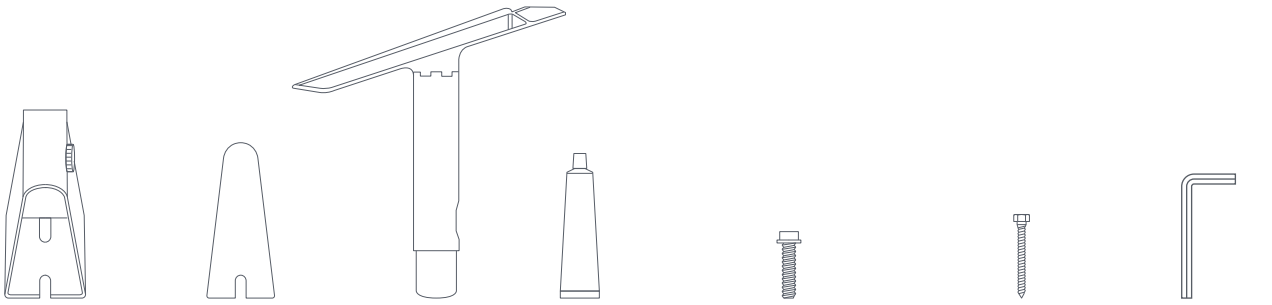

Wall Mount | Aesthetic Cover | Mast | Silicone | 12mm M6 Flanged Machine Button Head Screws (4x) | M10 Lag Screws (2x) | 4mm Hex Key

Recommended Tools

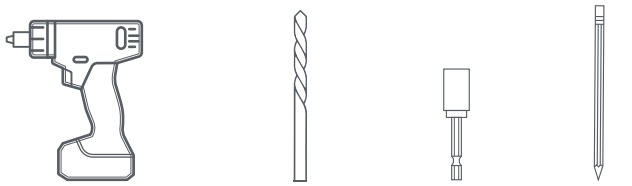

Drill / Impact Driver | Drill Bit 6 mm (1/4") | Socket 10mm | Pencil

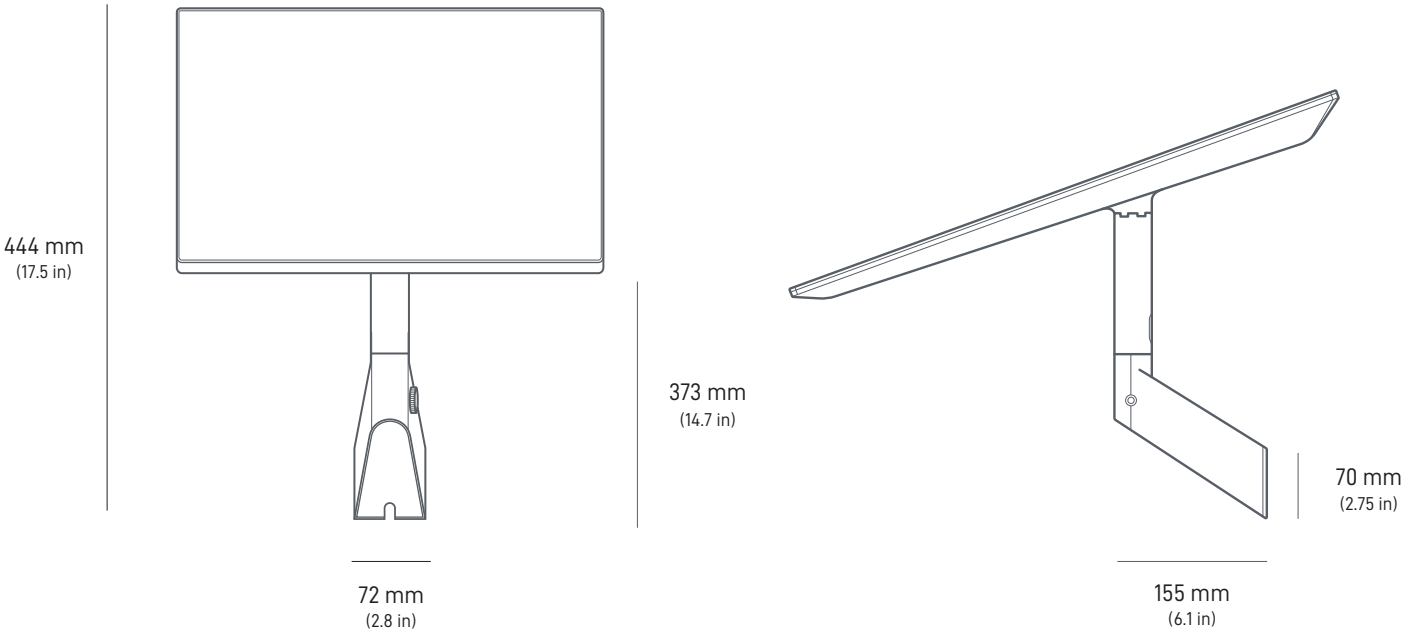

1 | **Download the Starlink App**

Scan the QR code to download the Starlink App.

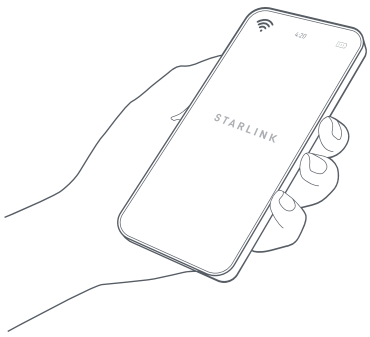

setup.starlink.com

2 | **Find a mounting location**

Your Starlink needs a clear view of the sky so it can stay connected with satellites as they move overhead. Objects that obstruct the connection between your Starlink and the satellite, such as a tree branch, pole, or roof, will cause service interruptions. Use the obstruction tool in the App to ensure you have selected a suitable mounting location.

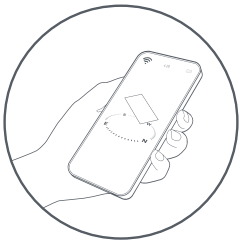

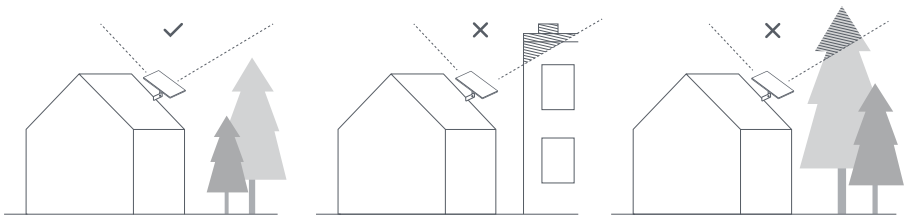

3 | **Install with Clearance to Structures**

Ensure the mounting location provides enough clearance for your Starlink, which may need to rotate to be properly aligned.

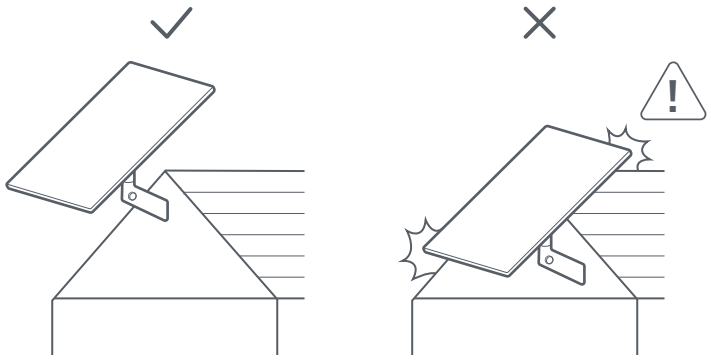

4 | **Route Cable Through Mount**

Insert the Performance Connector end of the Starlink cable through the hole in the side of the mast and up through the slot in the adapter.

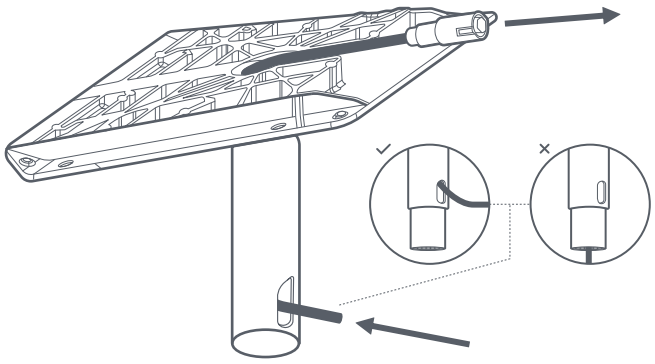

5 | **Plug in Starlink Cable**

Align the Performance Connector end of the Starlink cable indicated by the red notch and plug into your Starlink by holding the end of the plug and firmly inserting into the dish.

If the Starlink cable needs to be removed, rotate the collar counterclockwise and pull to disconnect from your Starlink.

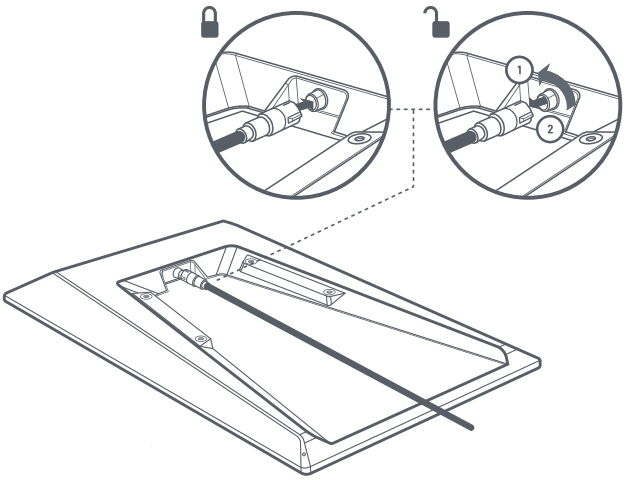

6 | **Install Wall Mount Onto Starlink**

Install the provided machine screws through the wall mount into the back of the Starlink and tighten the four screws using the hex key. Tighten screws in all 4 corners until bolts reach 7 N-m (5.2 lb-ft). Ensure the mount is firmly attached to the Starlink.

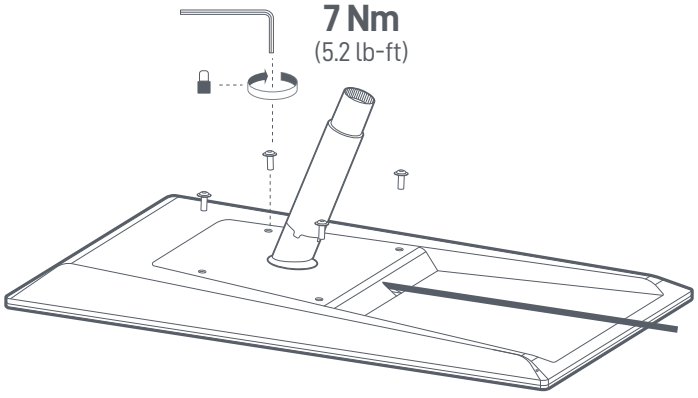

7 | **Mark the Pilot Holes**

Mark the location of the two holes on your wall mount using a marker. Place the holes directly over a structural beam to best secure your Starlink.

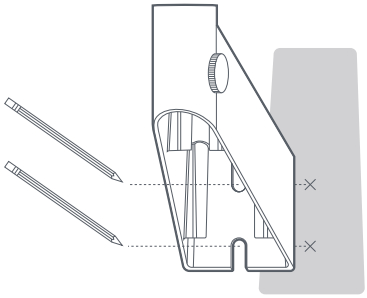

8 | **Drill the Pilot Holes**

Drill the holes with a 6 mm (1/4 in) drill bit.

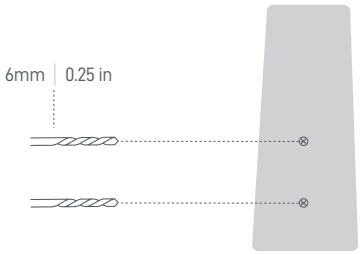

9 | **Apply Sealant and Screw in Wall Mount**

Apply silicone inside and over the holes. Screw in the mount using the provided screws.

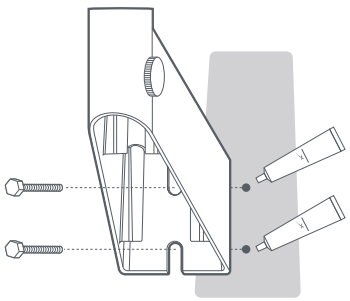

10 | **Insert Starlink into Wall Mount**

Slide the mast into the wall mount. Rotate your Starlink to face a clear view of the sky.

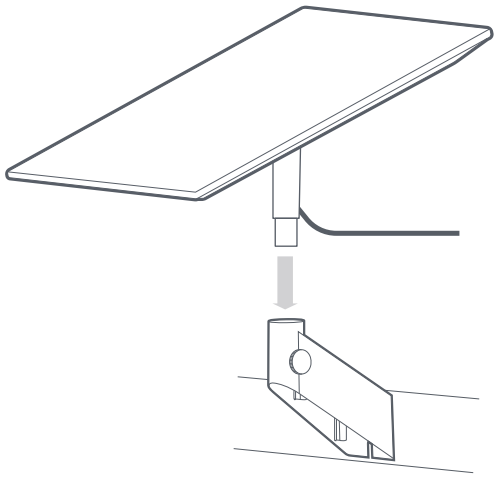

11 | **Feed Cable Through Wall Mount**

Feed the Starlink cable through the hole in the top side of the wall mount.

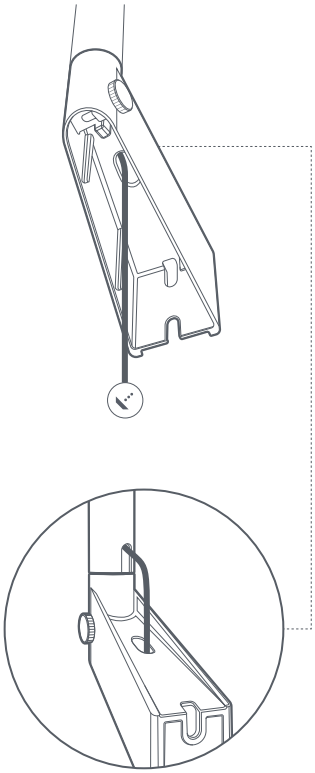

12 | **Install Cover**

Install the cover and feed the cable through. Connect the Starlink cable to the Advanced Power Supply then connect to power.

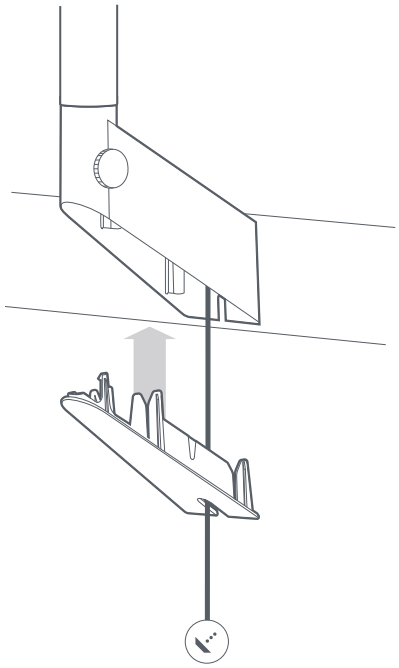

13 | **Align and Lock Your Starlink**

An alert on the App will show if you need to rotate Starlink to be properly aligned.
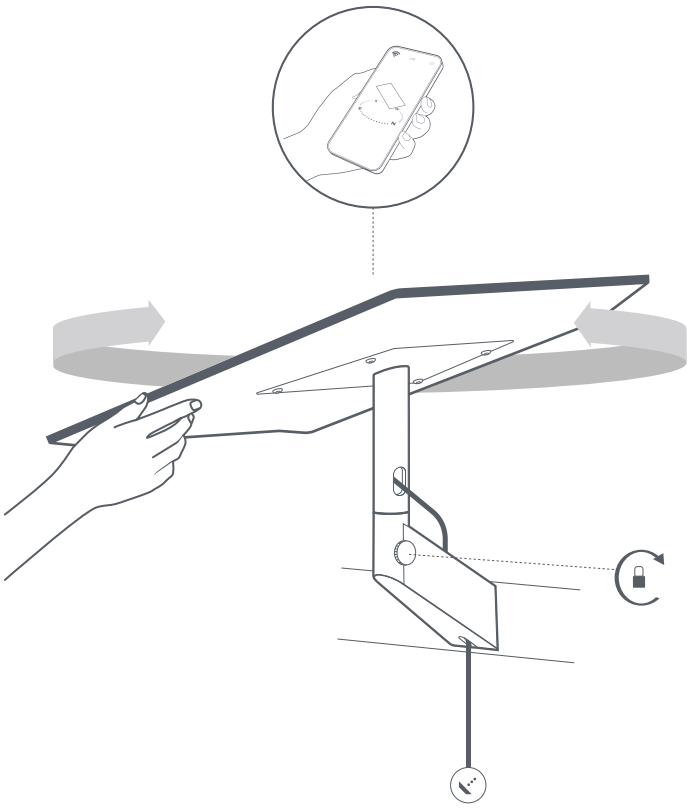
Click the alert to use the alignment tool. Once aligned, tighten the thumb-screw on the mast to prevent rotation